
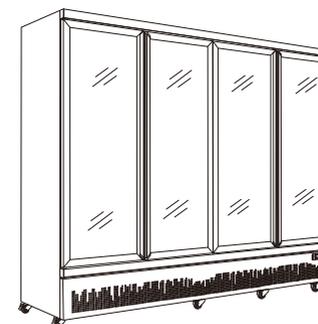


## OPERATING AND INSTRUCTION MANUAL

Please read the instructions carefully before using

# AISLEPRO

## OPERATING AND INSTRUCTION MANUAL UPRIGHT GLASS DOOR FREEZER

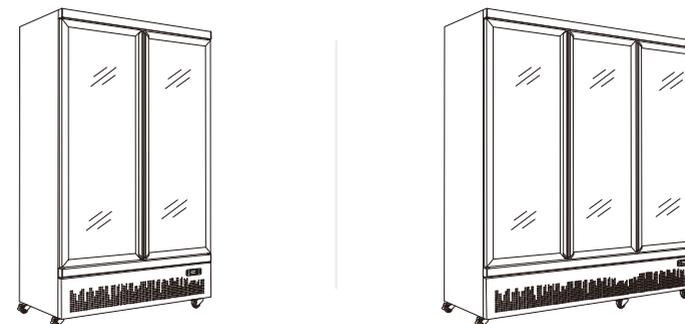

Before installing your freezer  
read these instructions carefully



# SAFETY PRECAUTIONS

The purpose of the safety precautions in this manual is to ensure the safe and proper use of the unit, thereby minimizing risks that could result in serious damage or injury to you or others. The safety precautions are divided into 2 subjects “WARNING” and “CAUTION. Situations where improper handling of the unit could lead to death or serious injury are listed under the “WARNING” heading. Cases listed under the “CAUTION” heading could also lead to serious consequences. To ensure safety, adhering strictly to both types of safety precautions.

**WARNING** Improper handling of the unit could lead to death or serious injury.  
**CAUTION** Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark contains information that should be strictly adhered to.
- After reading the instruction manual, store it in an easily accessible place where the user(s) of this product can easily find it.

## PRECAUTIONS FOR INSTALLATION

### ⚠ WARNING-R290

**WARNING:** This unit contained flammable material, please follow this instruction.  
**WARNING:** Equipment is only allowed to be transported and placed in the normal way. During transportation, we need to ensure that the heat from sun radiation or other forms of heat sources. Ensure the equipment is not exposed to heat of more than 60 Degrees Celsius.



- **WARNING:** Equipment should be installed in a well-ventilated place, avoiding larger thermal radiation. (Prohibit using in front of a heater or heating equipment)
- **WARNING:** Before performing any maintenance or upkeep, the power supply must be turned off, and professional personnel should be consulted.
- **WARNING:** R290 discharge is only allowed to be operated in a well-ventilated room or outdoor, and open flame is prohibited.
- **WARNING:** LED lights are not allowed to be replaced by yourself, but by professional maintenance personnel.



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

## PRECAUTIONS FOR INSTALLATION

### ⚠ WARNING



DON'T TAMPER

Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.



 ELECTRICAL SHOCK HAZARDS	Never splash water directly onto the product or wash with water as short circuit and electrical leakage could be resulted.	
 DANGER OF EXPLOSION	Never store explosive substances such as aerosol cans with a flammable propellant in this appliance as explosion and fire could be resulted.	
 PROHIBITED	Do not damage, modify excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects on the power cord or squeezing it in a tight place could damage it. Improper behaviors could result in electrical shock or fire.	
 PROHIBITED	Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and fire hazards.	
 FLAMMABLE	Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.	
 !	The freezer is designed for storage and display of frozen merchandises for sale. Do not use it for other purposes than the intended as this could adversely affect items placed in the unit.	
 ROTATING DEVICE	When the fan is rotating at a high speed inside the appliance, never attempt to insert fingers, sticks, etc. Improper operation could result in electrical shock and injury.	
 PROHIBITED	For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.	
 PROHIBITED	Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.	
 !	Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury. This unit can not be placed on top of another appliance.	
 CAUTION AGAINST EXPLOSION	If you detect a gas leak, please do not touch the freezer; attempting to turn off the gas and open the door for ventilation. Gas leaks could cause explosions, fires, and serious injuries. Please contact with hazard management authorities for assistance.	
 !	Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.	
 !	Cooling performance is reduced if the unit is placed near heat sources. Keep away from hot air source such as hot plates and stoves, or exposing to direct sunlight.	

	Leave disassembly and disposal of the unit to qualified experts.	
	Should the unit need temporary storage, make sure that it is not stored the unit in a location where children play and take precautions. Avoiding the door is completely closed; by this will minimize the risk that a child is trapped inside the compartment.	
	Well ventilated place. Please leave more than 10cm space between appliance and wall. If there is no space, cooling capacity could drop down.	
	Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.	
	This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.	
	Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.	
	If installation in a damp location is unavoidable, an electrical leakage circuit breaker is essential. Without an electrical leakage circuit breaker, electrical shock could occur.	
	Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.	
	Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.	
	WARNING: Keep clear of obstruction in all ventilation openings in the appliance enclosure or in the structure for building-in.	
	WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.	
	WARNING: Do not damage the refrigerating circuit.	
	WARNING: Do not use electrical appliances inside the cabinet unless they are of the type recommended by the manufacturer.	
	When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possible resulting in overheating and fire.	

	Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire. When find out the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.	
	Do not throw items onto shelves and do not place items totaling more than 30kg on each shelf. The shelf could fall down, possibly cause injury. Be sure shelves are attached and secured correctly. An improperly attached shelf could fall down and cause injury.	

## HOW TO USE

### BEFORE USE

- Remove shipping package, tape, etc. and leave doors open for a while to ventilate.
- The unit is cleaned before shipment. However, cleaning the compartment interior once after delivery.
- Please insert power supply plug into the wall outlet, single-phase to cat rating voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the freezer.

### WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off, which may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.

### TEMPERATURE ADJUSTMENT

To keep the appliance interior temperature keep between  $-18 \sim -22^{\circ}\text{C}$ .

- Digital thermostat has been set with proper parameter; do not change the parameter unless with advice from the manufacturer.
- Do not store high temperature food or merchandise.
- Keep the air ventilation path clear; do not store merchandise over the evaporator fan section.

## PRECAUTIONS FOR INSTALLATION

### WARNING

### DRAIN TRAY

- Defrosting will perform automatically and drain water will be collected in the drain tray.
- Water in the drain tray will be evaporated automatically.

- In high humidity environment, large amount defrosting water will be collected in the tray. To avoid leakage out from tray, please check and pull out the tray if necessarily.

## EFFICIENT USE

- In order to keep the appliance and stored merchandise at designated temperature, check if door was fully closed after open.
- Please install the appliance in the place which is well-ventilated.

## SHELF HEIGHT ADJUSTMENT

The shelf height can be adjusted.

- Arrange shelves in accordance with the dimensions of items to be placed in the freezer.

## PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Align items within the shelves to avoid protrusion, as the gap between shelves and the door facilitates cold air circulation.
- Place items evenly on all shelves. The bottom of the appliance was not designed for displaying goods; please store items on shelves.
- Do not throw items onto the shelves.
- The maximum weight limit for each shelf is 30 KG. Exceeding this limit may cause the shelf to break and could result in injury.

## CLEANING

### WARNING

To prevent electrical shock hazards from the rotating circulation fan, disconnect the power cord from the wall outlet to shut down the appliance before cleaning.

## EXTERIOR AND FREEZER COMPARTMENT

Use a soft, dry cloth to dust. For heavy soiling, first wipe with a cloth dampened with detergent, then follow up with a clean, damp cloth to remove any residue.

- Clean the freezer regularly to keep it clean for better performance.

## WARNING

**WARNING:** Do not splash water directly onto the freezer and do not wash with water. Short-circuit and electrical shock could be resulted in.

- Never use polishing powder, soap powder, benzene, oil or hot water as these will damage the painting and plastic components.

This appliance can not be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge. Unless they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

## CHECKS

To ensure the safety, perform the following checks after cleaning,

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

**In case the unit shows operating problems, check following common errors; contact with supplier if needs.**

SYMPTOMS	POSSIBLE CAUSE	SOLUTION
The unit is not operating	Faulty electrical contact	Verify electrical connections
	Poor electrical power	Check the power connection and electrical outlet
	Thermostat setting "0"	Change the thermostat setting to a higher number
Not reaching desired temperature	Unit is exposed to direct sun light	Relocate the unit to a shaded area
	Thermostat is not properly adjusted	Adjust the thermostat setting to a higher number
	Clogger condenser	Review maintenance instruction listed in the manual
	Blocked grills	Clean the grills of any debris collected
	Door not properly closed	Check the leveling of the unit and door seal
	Products poorly distributed or excess product load	Redistribute the product load according to start instructions
Abnormal noises	For models with electronic temperature controller, indicates E1	Disconnect the unit and restart it after 10 minutes. If the error persists, contact your dealer or an authorized service company
	The unit is not properly leveled	Level the unit following the Installation instructions
Water on the floor	Friction with other objects	Remove objects that have been placed on top of or near the appliance
	Drain hose is outside of the drain pan	Locate the hose in the drain pan

## WARRANTY & SERVICE

- Warranty is valid for one year from the date of purchase.
- The warranty covers defective parts and workmanship. The following items are not covered under warranty:
  1. Loss of products.
  2. Damages caused by transportation.
  3. Damages caused by modifications made by unauthorized individuals.
  4. Fluorescent lights, glass parts or plastic component parts.
  5. Worn out plugs or defective electrical components.
  6. Maintenance of the unit.
- Warranty is valid showing the purchase receipt.
- We offer a professional service network which offers the necessary technical support for your unit.

## Important instructions for environment

Compliance with the WEEE Directive and Disposing of the Waster Product:

This product complies with EU WEEE Directive (2012/19/EU).

This product bears a classification symbol for waster electrical and electronic equipment WEEE.

This  symbol indicates that this product shall not be disposed with complies with other household wastes at the end of its service life.

Used device must be returned to official collection points for recycling of electrical or electronic devices.

To find these collection systems please contact your local authorized retailer where the product was purchased. Each house hold performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps preventing potential negative consequences for the environment and human health.